

### EC91 Foot Switch

The foot switch is used as a triggering device. The switch has an open contact and when depressed, gives a TTL output. It can be connected to either the trigger input of the **e-corder** to provide triggering signals, or one of the channel inputs for comment insertion.



EC91 Foot Switch

### EC92 Push Button Switch


The Push Button Switch provides a 6 V output for triggering, timing or marker signals. It can be connected to either the trigger input of the **e-corder** or one of the input channels.



EC92 Push Button Switch

### EC09 BNC to 4 mm Banana Plug Adapter


BNC to 4 mm Banana Plug adapter fused to connect individual conductors to a BNC connection.

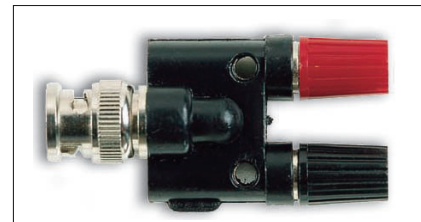

EC09 BNC to Banana Plug Adapter

### EC10 BNC T-piece

For splitting a signal so it can be carried by two cables.

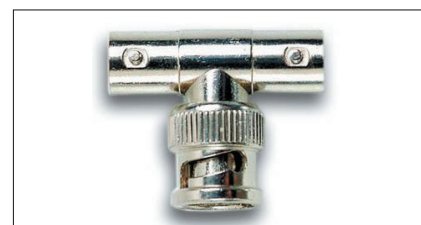

EC10 BNC T-piece